



SC、SU、SI系列固定夹具

SC, SU, SI Series Bracket

SC

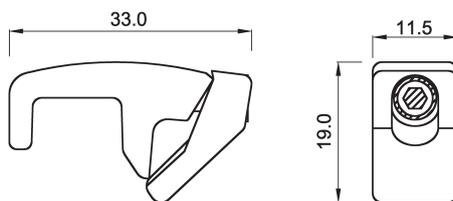


SU

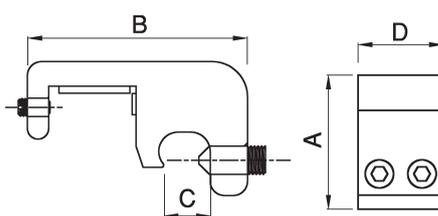

型号 Model	A	B	C	D
SU-6	14	32.3	6.3	11.5
SU-8	14	34.3	8.3	11.5
SU-10	15.5	35	10.3	11.5
SU-12	16.2	45	12.3	11.5
SU-16	18.2	52.3	16.5	11.5

SI


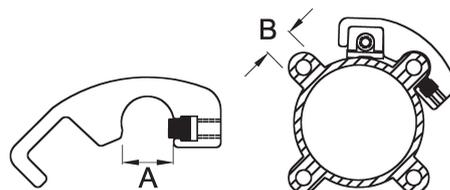


型号 Model	A	B	适用米字 型缸缸径
SI-1	11.15	10.4	Φ32~Φ40
SI-2	14.1	13.5	Φ50~Φ63
SI-3	15.45	15	Φ80
SI-4	16.3	16	Φ100
SI-5	19.8	18.7	Φ125
SI-6	26.5	25.65	Φ150

固定钢带

Clamp

短固定钢带, 适用于Φ6~Φ63圆型缸。
长固定钢带, 适用于Φ6~Φ125圆型缸。

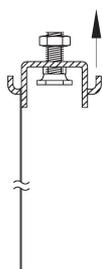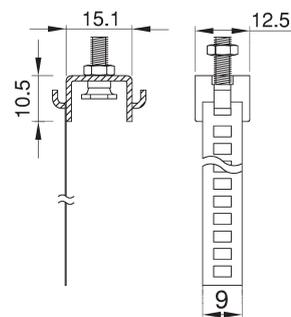

步骤1

将夹头上的螺丝向上松开。




步骤2

1. 钢带一端套入夹头挂钩上。
2. 如上图将磁性开关及气缸组合, 并拉紧钢带。
3. 在另一边钢带挂钩可挂入的孔位上作记号。

Step 2

Place sensor & wrap the band around the cylinder, Position the hook with the nearest hole on the band and mark the hole with a permanent marker.

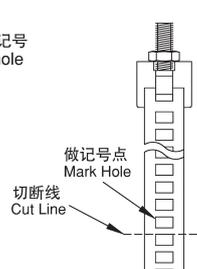


步骤3

1. 如上图记号孔之后的位置剪断钢带。

Step 3

Remove mounting assembly. Cut the band at the nearest edge of next hole. (the one that's further away from the mounting head).

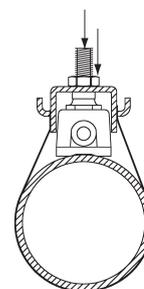

步骤4

1. 将裁剪好的钢带一端套入夹头挂钩上。
2. 如上图将磁性开关及气缸组合, 并锁紧螺丝, 使夹头顶起。
3. 锁紧螺帽, 使螺丝固定。

Step 4

Re-place the sensor & mounting assembly. Wrap the band & put the chosen hole on hook. Position the switch & tighten. Finally swivel nut for steadying.

